

DIAGNOSIS

1. STICS..... 3



STICS**0000-00****DIAGNOSIS****1. STICS**

Fault Code	Malfunction	Descriptions
01	Dr Door Lock Knob	Driver's door lock knob is not operated when locking/unlocking doors.
02	Ps Door Lock Knob	Passenger's door lock knob is not operated when locking/unlocking doors.
03	Rr Door Lock Knob	Rear door lock knob is not operated when locking/unlocking doors.
04	T/Gate Lock Knob	Tailgate lock knob is not operated when locking/unlocking doors.
05	Door Lock Output	All door lock knob are not moved to lock position even when the door lock relay is activated.
06	Door Unlock Output	All door lock knob are not moved to unlock position even when the door unlock relay is activated.
07	C/DR Lock Output	Doors are locked by central door lock switch while the engine is running.
08	DR Lock Output	Doors are locked by driver's door lock switch while the engine is running.
09	PS Lock Output	Doors are locked by passenger's door lock switch while the engine is running.
10	Auto Door Lock Output	Door lock knob is not moved to lock position when the system outputs auto door lock signal while the ignition switch is in ON position and the vehicle speed is over 50 km/h.
11	Auto Door Unlock Output	Door lock knob is not moved to unlock position after receiving the output from collision sensor.
12	Wiper Output	The WIPER P-POS signal is not detected when the wiper relay is activated.
13	SPEED SIGNAL	The vehicle speed over 3 km/h is detected at the speed signal area while the ignition switch is in ON position and the alternator signal is "D" LOW.
14	INT WIPER Volume	The circuit is open (over 4.5 V) when changing the INT volume in the speed sensitive INT wiper (saved as history error).
15	SPEED SENSOR	The vehicle speed over 200 km/h is detected (saved as history error).
16	A/BAG COLLISION SENSOR INPUT	A signal is sent to the collision sensor input area while the ignition switch is in OFF position (saved as history error unconditionally).
17	A/BAG COLLISION SENSOR OUTPUT	The RKSTICS outputs UNLOCK signal after receiving collision sensor input while the ignition switch is in ON position (saved as history error).
18	A/BAG COLLISION MONITOR	The STICS outputs the Door Unlock signal due to the collision sensor and the feedback value is in proper range (saved as history error).
19	Door Ajar Warning IND	The door warning indicator blinks when the vehicle speed is over 10 km/h (saved as history error).
20	PARKING BRAKE IND	The parking brake indicator blinks when the vehicle speed is over 10 km/h (saved as history error).
21	Auto Washer Out	The auto washer output is not sent to the front washer (saved as history error).
22	WASHER RELAY	The front washer switch receives the input signal for more than 10 seconds (saved as history error).

Modification basis	
Application basis	
Affected VIN	

STICS

REXTON 2006.09

ECU-
GASOLINECU-
DIESEL

BRAKE

AIR-BAG

CCCS

FATC

FFH

P/TRUNK

RAIN
SENSOR

STICS

TC

TCU

TGS
LEVER

Fault Code	Malfunction	Descriptions
23	REMOCON VOLTAGE CHECK	The voltage from remote control key is saved as history error.
24	SBR S/BELT SW (Only EU)	When the seat belt switch circuit is OPEN (HIGH) in KEY OUT & ARMED MODE, the system recognizes it as FAIL and saves it as History error (Normal Close (GND)).
25	SBR SENSOR (Only EU)	When the sensor value is recognized in KEY OUT & ARMED MODE, the system saves it as History error.
26	SBR CONNECTION (Only EU)	When the seat belt switch circuit maintains OPEN (HIGH) in KEY OUT & ARMED MODE while the vehicle speed is over 50 km/h, the system saves it as History error.

Modification basis	
Application basis	
Affected VIN	